

Component Procedures: Blind Spot Switch

Table of Contents

1. Blind-Spot Radar Switch - Repair Procedures (Article 44701)


Component Procedures: Blind Spot Switch

Blind-Spot Radar Switch - Repair Procedures (Article 44701)


- Inspection
- Disconnect the negative (-) battery terminal.
- Remove the crash pad lower panel. (Refer to Body - "Crash Pad Lower Panel")



- Remove the lower crash pad switch assembly (A) after disengaging the mounting clip.

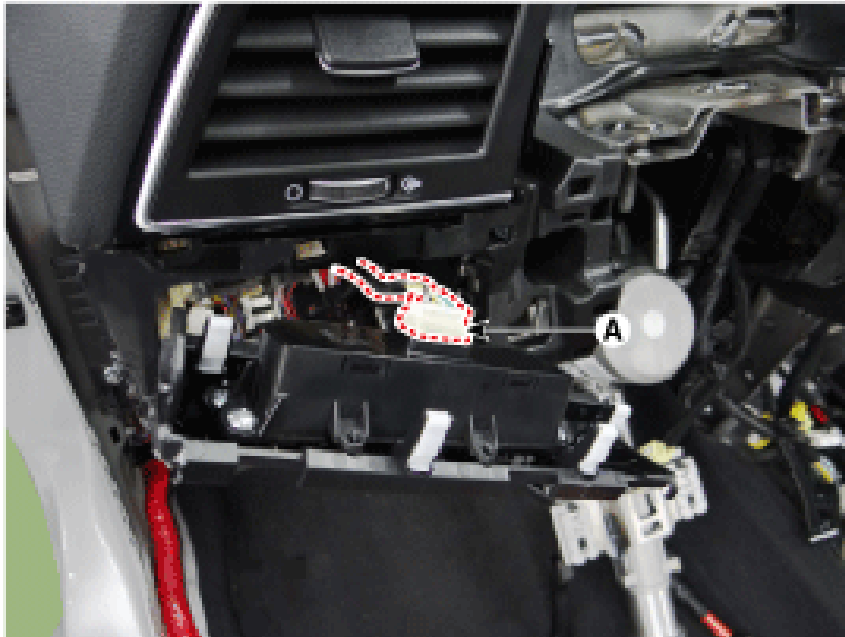

- Remove the rheostat switch connector (A).

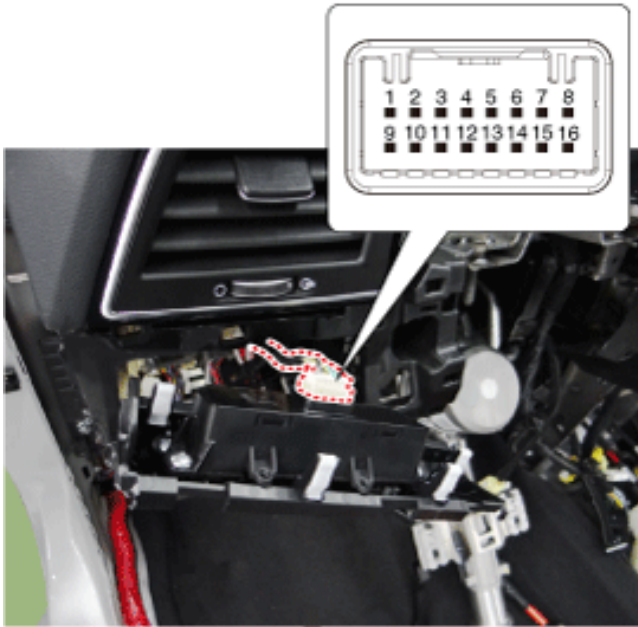

- Check for intensity of new rheostat switch. If the light intensity of the lamps changes smoothly without any flickering when the rheostat is turned, it can be assumed that the rheostat is normal.

Terminal Position	6	1
	ON	○
OFF		