

Component Procedures: Arm Rest

Table of Contents

1. Console Armrest - Components and Components Location (Article 45004)
2. Console Armrest - Repair Procedures (Article 45005)
3. Rear Back Armrest - Repair Procedures (Article 45090)

Component Procedures: Arm Rest

Console Armrest - Components and Components Location (Article 45004)

- Component Location



1. Console armrest

Console Armrest - Repair Procedures (Article 45005)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Take care not to bend or scratch the trim and panels.




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.


- Take care not to bend or scratch the trim and panels.

- Remove the floor console assembly. (Refer to Floor Console - "Floor Console Assembly")

- Remove the rear console cover. (Refer to Floor Console - "Rear Console Cover")
- Loosen the mounting screws and remove the console armrest (A).

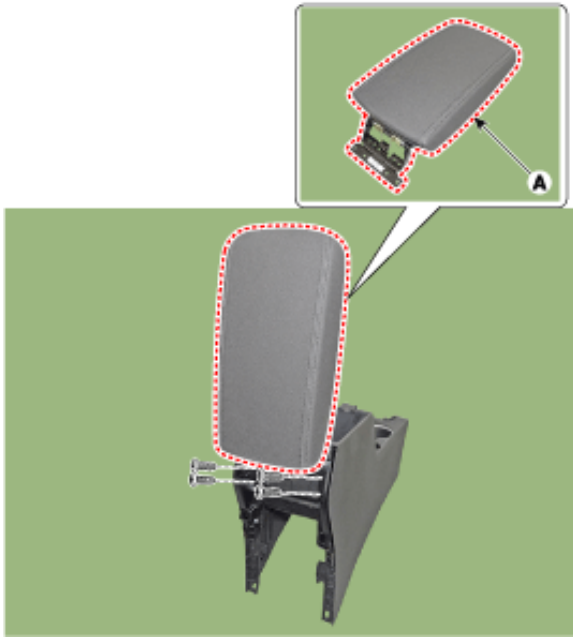

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers). Replace any damaged clips (or pin-type retainers).

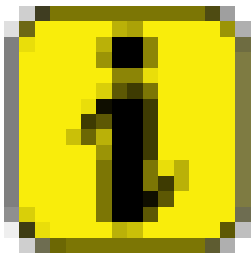


Information

- Replace any damaged clips (or pin-type retainers).

Rear Back Armrest - Repair Procedures (Article 45090)


- Replacement

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface. Take care not to bend or scratch the trim and panels.

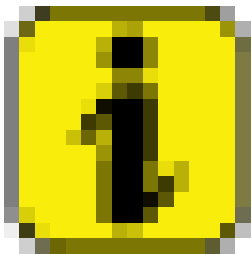


Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.
- Fold the rear seat back assembly [LH] (A) by pulling the folding lever in the direction of the arrow.

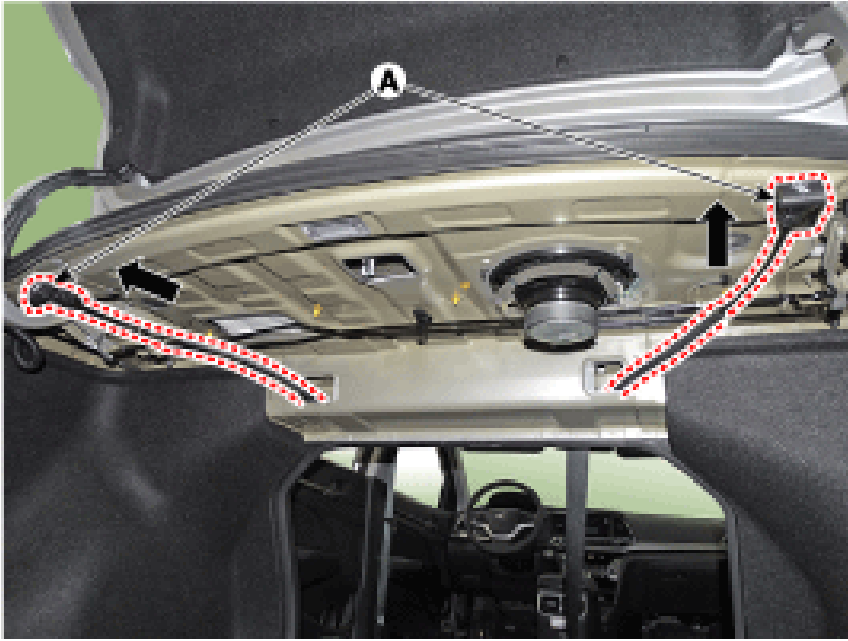

- Separate the rear back armrest (A) after removing the cap and then loosening the bolt.

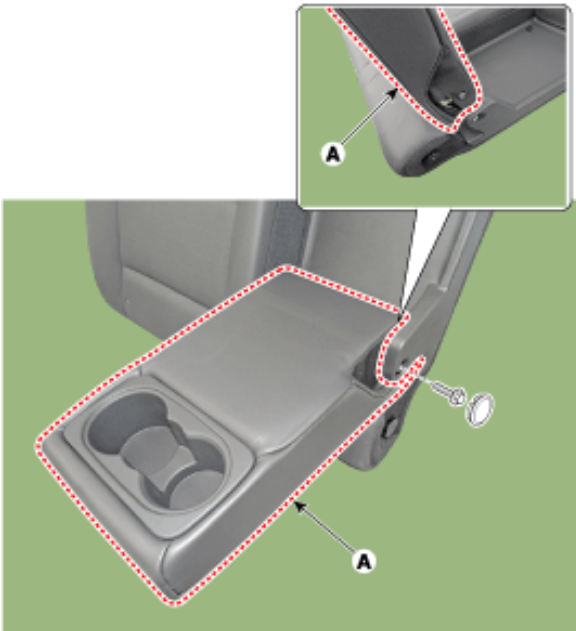

- To install, reverse the removal procedure.