

Component Procedures: Flex Plate

Table of Contents

1. Parts and Labor (itype_189)
2. Drive plate - Components and Components Location (Article 45350)
3. Drive plate - Repair Procedures (Article 45351)

Component Procedures: Flex Plate


Parts and Labor (itype_189)

Parts

| Qualifier | Part # | Name | Price | Note |
|---------------------|------------|-------------|-------|------|
| Automatic Transaxle | 2321125050 | Drive Plate | 81.40 | |

Drive plate - Components and Components Location (Article 45350)

- Components

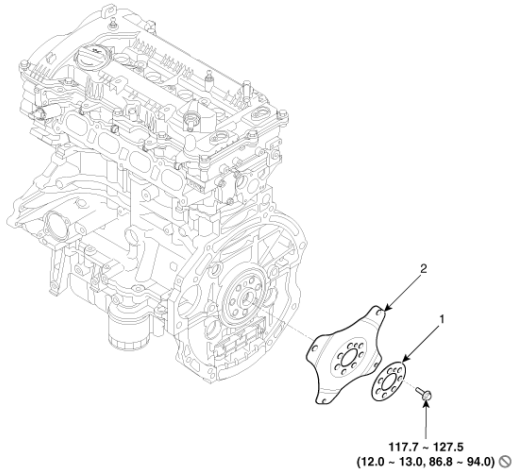


Tightening torque : N.m (kgf.m, lb-ft)

1. Adapter plate 2. Drive plate

Drive plate - Repair Procedures (Article 45351)

- Removal and Installation

- Remove the automatic transaxle. (Refer to Automatic Transaxle System - "Automatic Transaxle")
- Remove the drive plate (A) and the adapter plate (B). Tightening torque : 117.7 - 127.5 N.m (12.0 - 13.0 kgf.m, 86.8 - 94.0 lb-ft) Do not reuse the bolts.

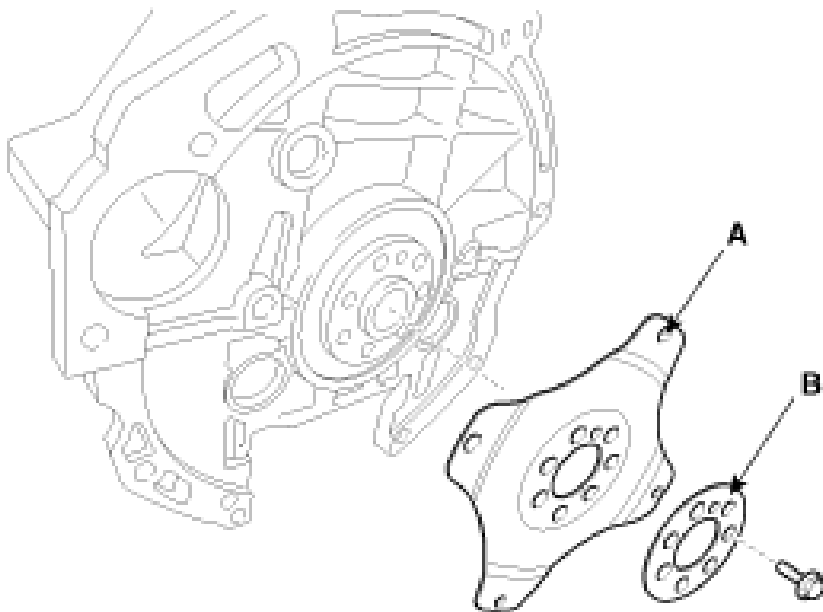

Do not reuse the bolts.

NOTICE

- Do not reuse the bolts.
- Install in the reverse order of removal.