

Component Procedures: Glove Compartment

Table of Contents

1. Glove Box Upper Cover Housing - Components and Components Location (Article 45022)
2. Glove Box Upper Cover Housing - Repair Procedures (Article 45023)

Component Procedures: Glove Compartment

Glove Box Upper Cover Housing - Components and Components Location (Article 45022)

- Component Location



1. Glove box upper cover housing

Glove Box Upper Cover Housing - Repair Procedures (Article 45023)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Take care not to bend or scratch the trim and panels.



Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

- Take care not to bend or scratch the trim and panels.

- Remove the cowl side trim. (Refer to Interior Trim - "Cowl Side Trim")

- Remove the gear knob & boots (A) pull both of it up. [AT] [MT]
[AT]




[MT]




- Remove the rubber mat (A).



- Using a screwdriver or remover, remove the console upper cover (A).

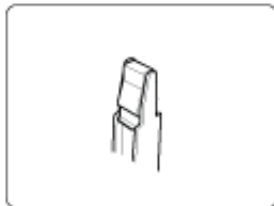


- Disconnect the connector (A).

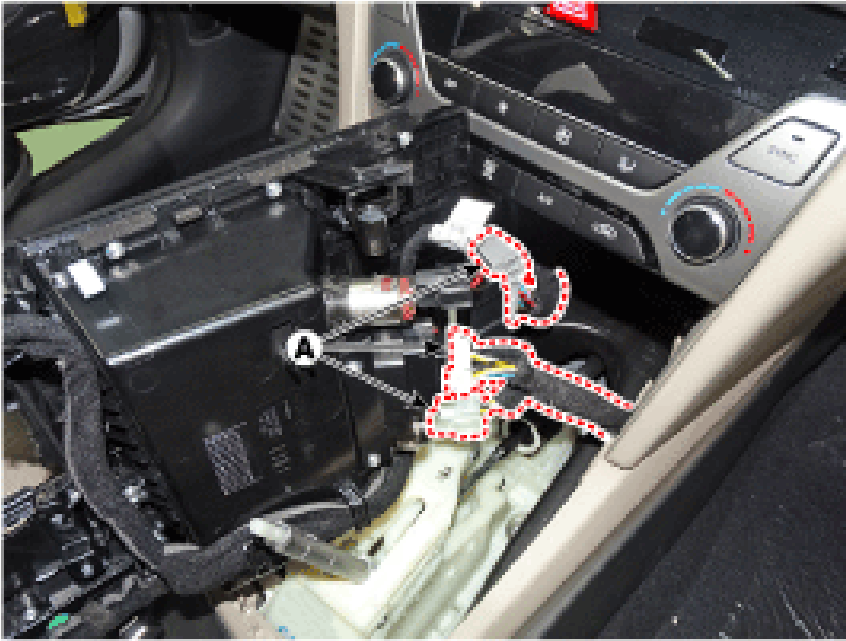


- Using a screwdriver or remover, remove the console garnish (A).




- Remove both stoppers (B) from the glove box (A) by turning the stoppers.

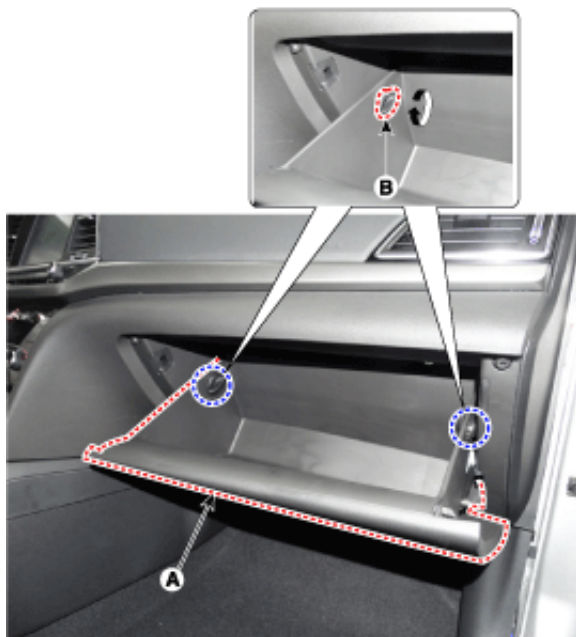

- Separate the air damper (A) from the glove box (B).

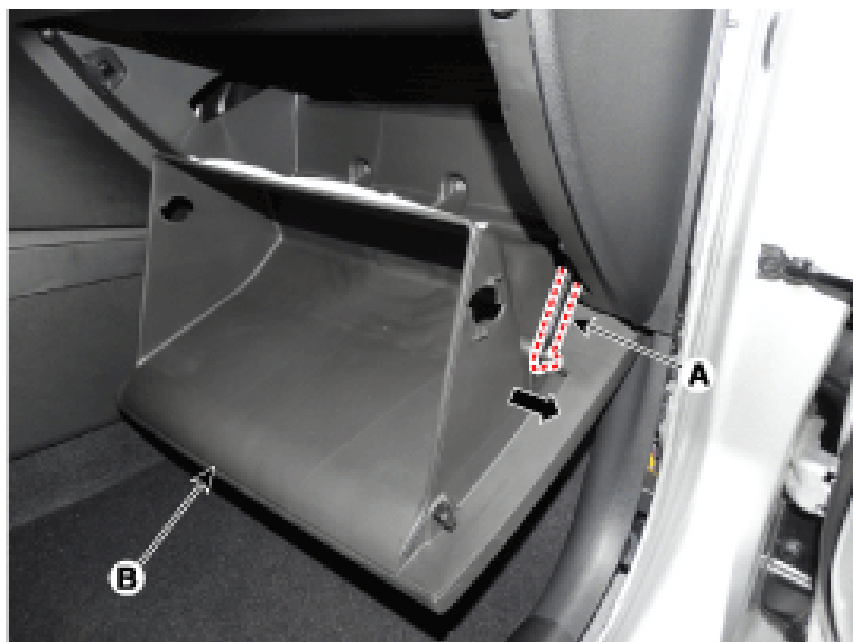


- Disconnect the pushpins (A) and then remove the glove box (B).

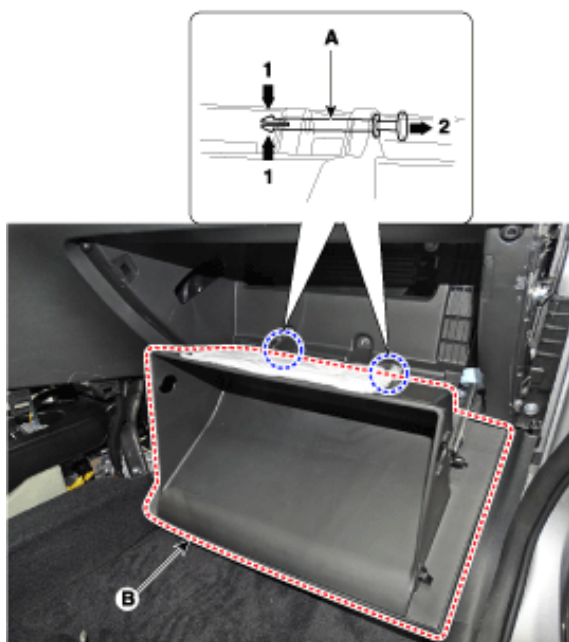


- Using a screwdriver or remover, remove the crash pad side cover [RH] (A).




- Using a screwdriver or remover, remove the crash pad under cover [RH] (A).

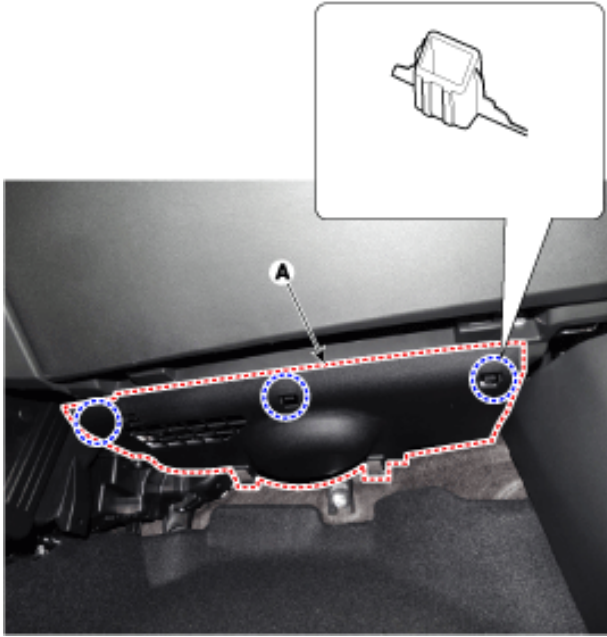


- Loosen the mounting screws and remove the crash pad molding [RH] (A).

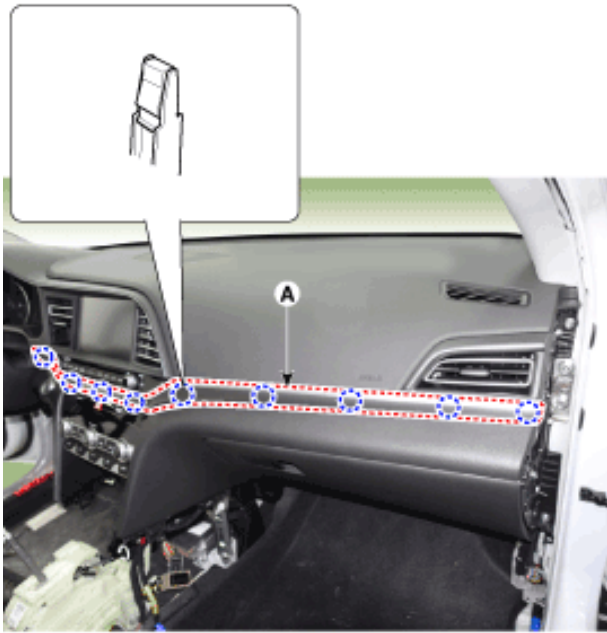

- Loosen the mounting screws and remove the crash pad side garnish assembly [RH] (A).

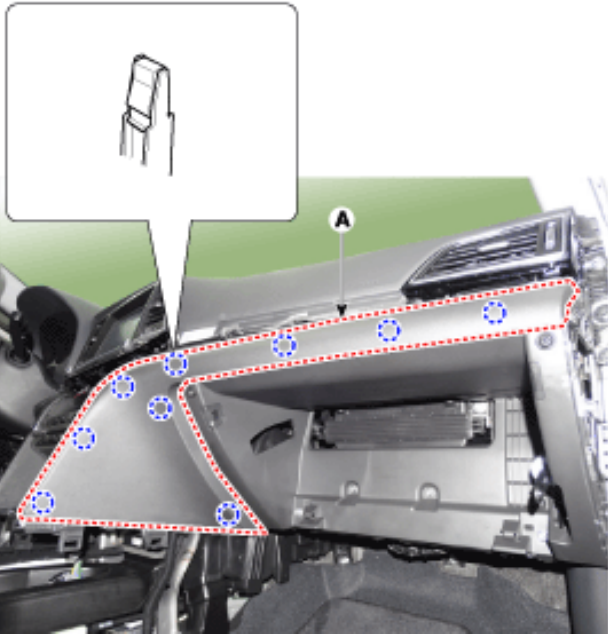

- After loosening the mounting screws and nuts, remove the glove box upper cover assembly (A).

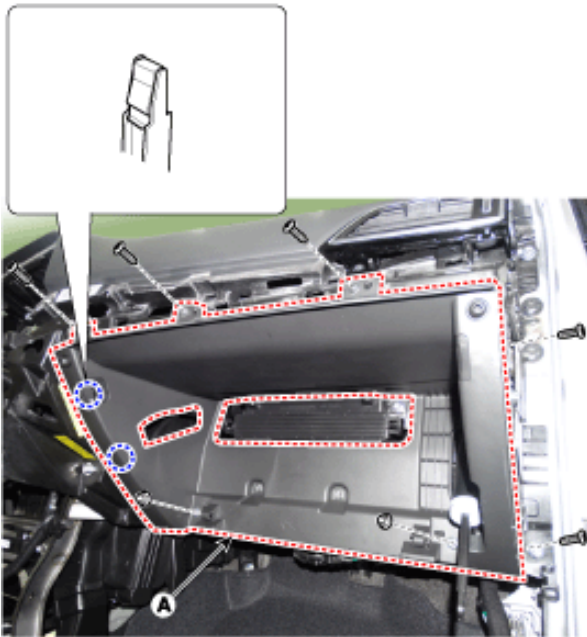

- To install, reverse the removal procedure. Make sure the connector are connected in properly. Replace any damaged clips (or pin-type retainers).

Make sure the connector are connected in properly. Replace any damaged clips (or pin-type retainers).

- Make sure the connector are connected in properly.

- Replace any damaged clips (or pin-type retainers).