

# **Component Procedures: Shift Linkage**


## **Table of Contents**

1. Control Shaft Assembly - Description and Operation (Article 44530)

## Component Procedures: Shift Linkage

### Control Shaft Assembly - Description and Operation (Article 44530)

- Description

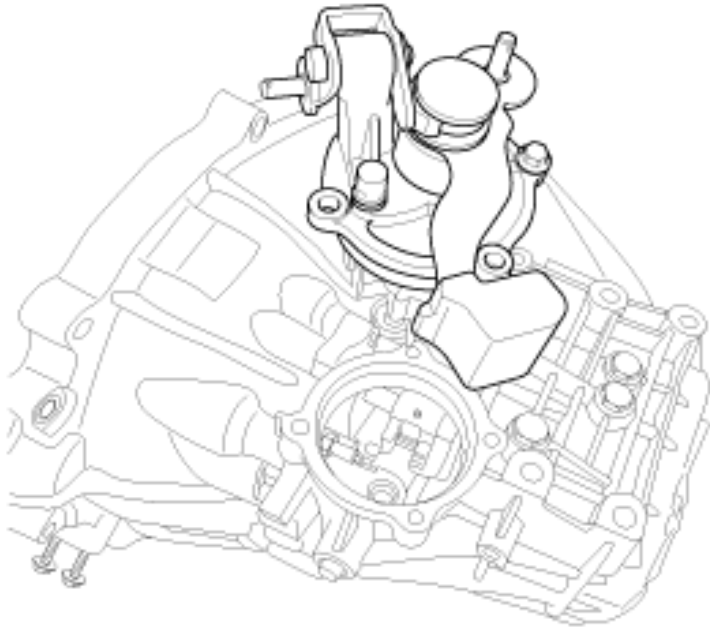

- Mounting location : Control shaft complete is mounted on the top of the manual transaxle, and select & shift cable are equipped.

- Function : Change the gear by shifting a shift lever.