

Component Procedures: Positive Crankcase Ventilation

Table of Contents

1. Parts and Labor (itype_189)
2. Crankcase Emission Control System (Article 44093)
3. Crankcase Emission Control System - Repair Procedures (Article 44094)

Component Procedures: Positive Crankcase Ventilation

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Emission System > PCV Valve	267402G000	Pcv Valve	24.06	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Emission System > PCV Valve, R&R	C	0.3	0.0

Crankcase Emission Control System (Article 44093)

- Schematic Diagram

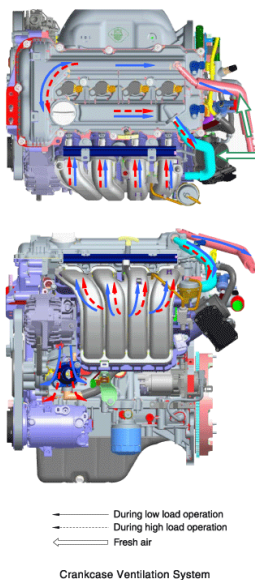


Crankcase Emission Control System - Repair Procedures (Article 44094)

- Inspection
- After disconnecting the vapor hose from the PCV valve , remove the PCV valve.
- Reconnect the PCV valve to the vapor hose.
- Run the engine at idle, then put a finger over the open end of the PCV valve and make sure that intake manifold vacuum can be felt. The plunger inside the PCV valve will move back and forth at vacuum.
- The plunger inside the PCV valve will move back and forth at vacuum.

NOTICE

- The plunger inside the PCV valve will move back and forth at vacuum.

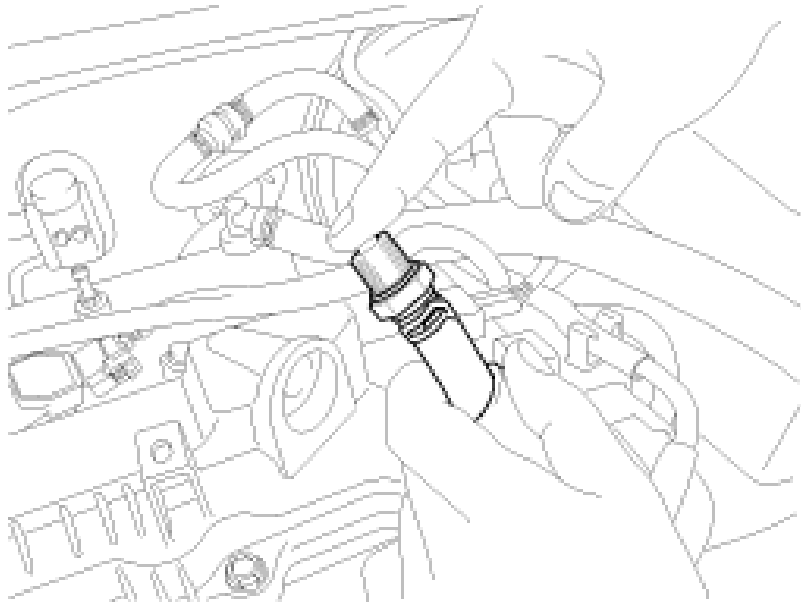

- If the vacuum is not felt inspect PCV operation, if operating correctly clean or replace the vapor hose.