

Component Procedures: Transmission Position Sensor/Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Automatic Transaxle (Article 44404)
3. Automatic Transaxle (Article 44408)
4. Automatic Transaxle (Article 44418)
5. Automatic Transaxle (Article 44414)
6. Automatic Transaxle (Article 44406)
7. Automatic Transaxle (Article 44412)

Component Procedures: Transmission Position Sensor/Switch

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Switches	4270026700	Neutral Safety Switch	84.97	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches > Range Sensor, R&R	B	0.7	0.0

Automatic Transaxle (Article 44404)

Non Standards

- Inhibitor Switch - Description and Operation (44405)

Automatic Transaxle (Article 44408)

Non Standards

- Inhibitor Switch - Schematic Diagrams (44409)

Automatic Transaxle (Article 44418)

Non Standards

- Shift Lever - Components and Components Location (44419)

Automatic Transaxle (Article 44414)

Non Standards

- Inhibitor Switch - Repair Procedures (44415)
- Shift Lever - Repair Procedures (44422)

Automatic Transaxle (Article 44406)

Non Standards

- Inhibitor Switch - Specifications (44407)

Automatic Transaxle (Article 44412)

Non Standards

- Inhibitor Switch - Troubleshooting (44413)