

Component Procedures: Cruise Control Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Component Tests and General Diagnostics (itype_383)

Component Procedures: Cruise Control Switch

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Engagement Switch > Without ?	BS3E664M0	Engagement Switch	239.80	
Engagement Switch > With Aud?	BS3G664M0	Engagement Switch	369.64	
Engagement Switch > With Aud?	BS3G664M0	Engagement Switch	369.64	
Engagement Switch > With Aud?	BAN6664M0	Engagement Switch	349.70	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Replace	Engagement Switch	B	0.6	0.4
Replace	Main Switch, R&R	B	0.6	0.4

Component Tests and General Diagnostics (itype_383)

Switch condition	Resistance (ohm)
ON/OFF button pressed	Continuity
CANCEL button pressed	118—122
SET/COAST button pressed	667—693
RES/ACCEL button pressed	2,156—2,244
No button pressed	No continuity

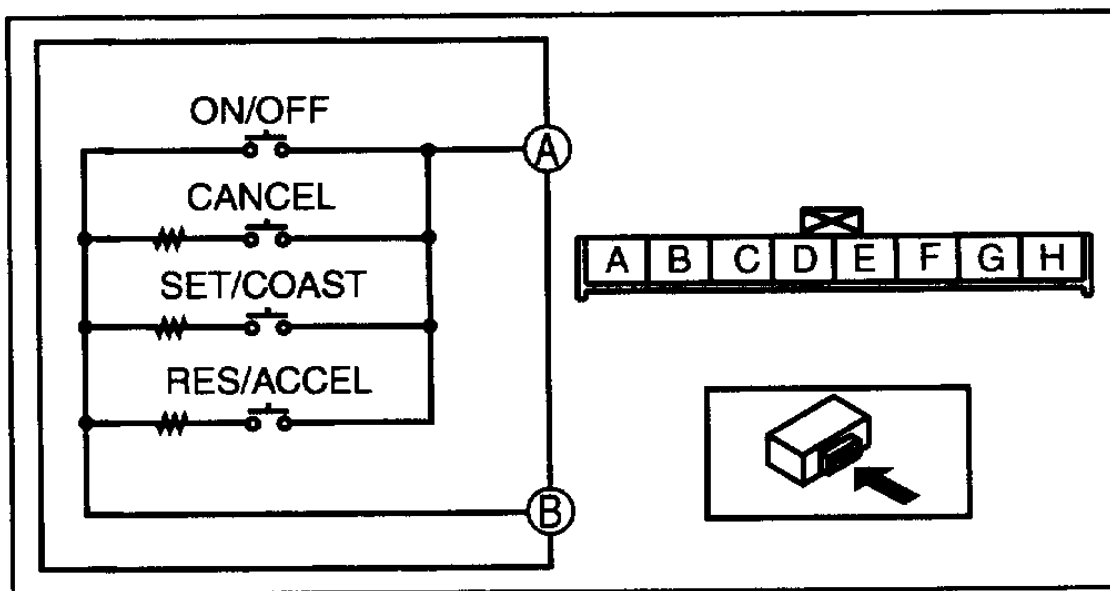

e3u120zw6001

PCM
HARNESS SIDE CONNECTOR

1BE	1BA	1AW	1AS	1AO	1AK	1AG	1AC	1Y	1U	1Q	1M	1I	1E	1A
1BF	1BB	1AX	1AT	1AP	1AL	1AH	1AD	1Z	1V	1R	1N	1J	1F	1B

1BG	1BC	1AY	1AU	1AQ	1AM	1AI	1AE	1AA	1W	1S	1O	1K	1G	1C
1BH	1BD	1AZ	1AV	1AR	1AN	1AJ	1AF	1AB	1X	1T	1P	1L	1H	1D



e3u120zw6992