

Component Procedures: Hazard Warning Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Hazard Lamp Switch - Repair Procedures (Article 44653)

Component Procedures: Hazard Warning Switch

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Switches > Hazard Switch		Part Of Navigation Sys?	0.00	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches > Hazard Switch, R&R	B	0.5	0.0

Hazard Lamp Switch - Repair Procedures (Article 44653)

- Inspection
- Check for continuity between terminals. If the continuity is not as specified, replace the hazard lamp switch. Manual (Auto)

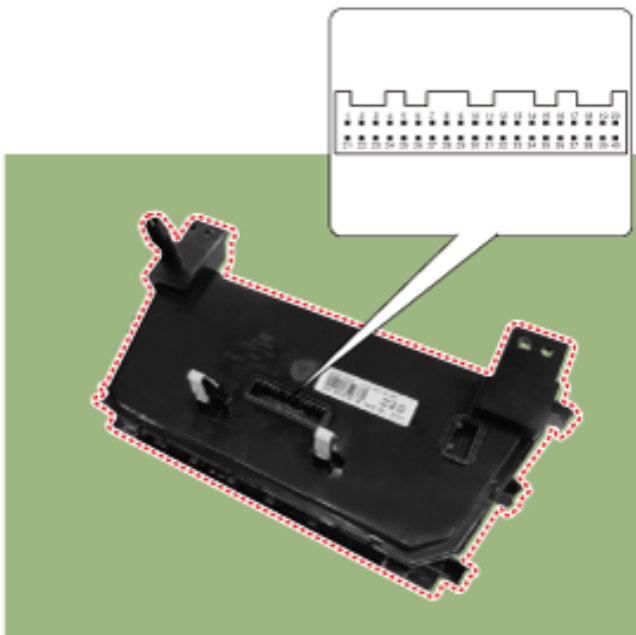

Manual (Auto)


Terminal / Position	14(17)	20
OFF	○	○
ON		

- Removal


Wrap the protective tape on the tool to disassemble with the screwdriver or remover. Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil. Use caution for the crash pad garnish and door trim upper garnish made of timber (Real wood) because they can be scratched or picked. Be careful not to scratch the door trim and other parts.

⚠ CAUTION


- Wrap the protective tape on the tool to disassemble with the screwdriver or remover.
- Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil.
- Use caution for the crash pad garnish and door trim upper garnish made of timber (Real wood) because they can be scratched or picked.
- Be careful not to scratch the door trim and other parts.
- Disconnect the negative (-) battery terminal.
- Remove the glove box upper cover assembly. (Refer to Body - "Glove Box Upper Cover Assembly")
- Loosen the mounting screws and remove the crash pad center lower cover [LH] (A).

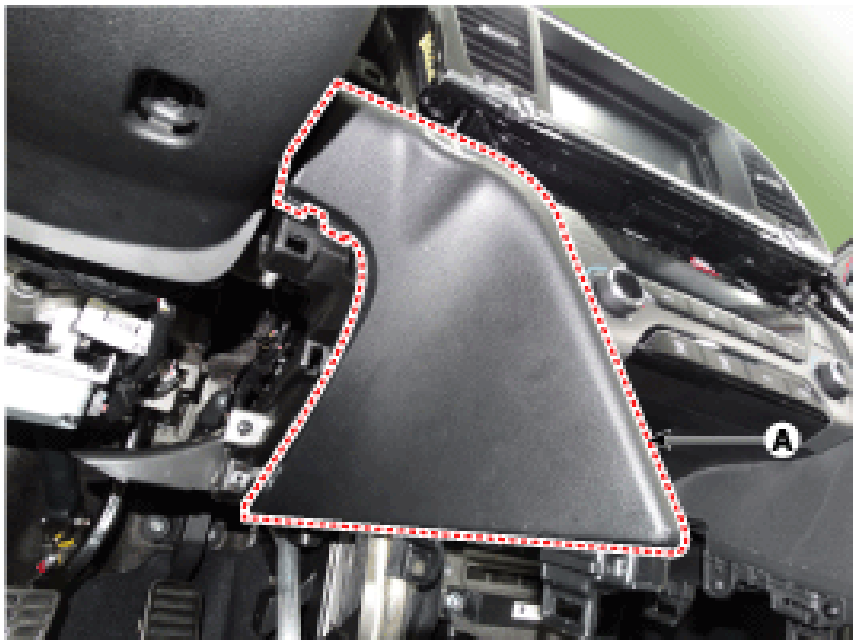

- After loosening the mounting screws, remove the A/C & heater controller unit (A).

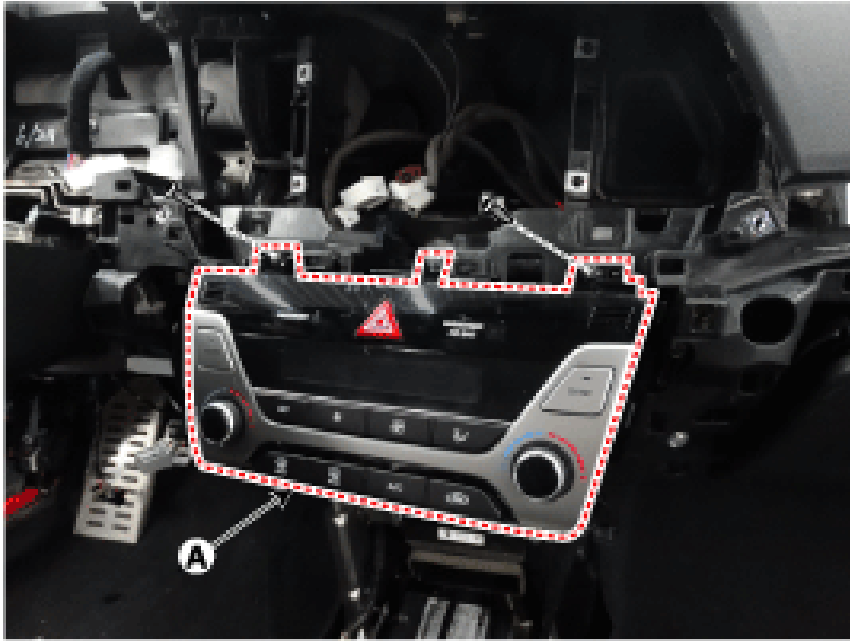

- Disconnect the A/C & heater controller connectors (A) and hose (B).

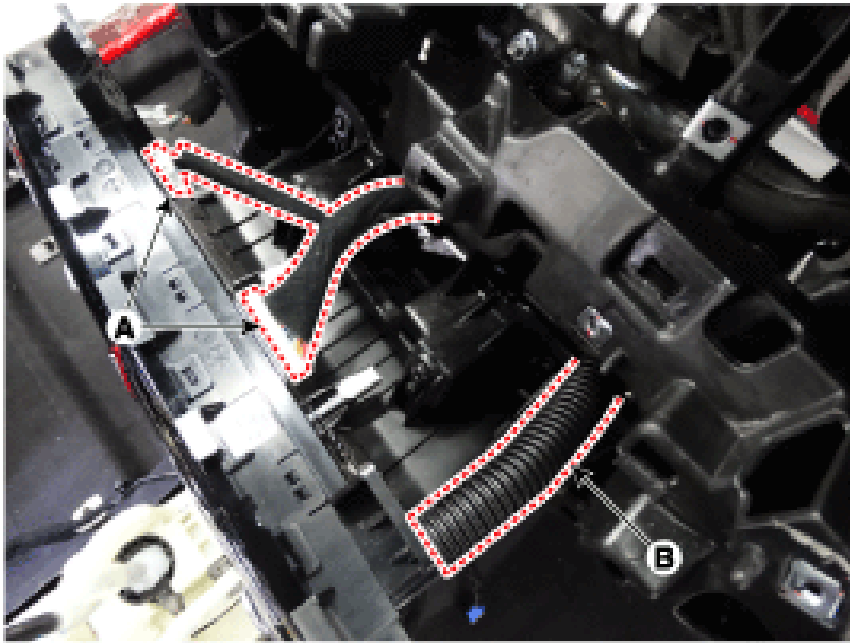

- Installation
- Install the center facia panel switch assembly.
- Connect the negative (-) battery terminal.